

Applicable Standards/Codes

IAPMO certified to meet or exceed the following:

- ASME A112.18.1/CSA B125.1
- Uniform Plumbing Code
- National Plumbing Code of Canada
- NSF/ANSI 61
- Section 116875 of the California Health & Safety Code
- EPA WaterSense
- ADA Compliant


NSF/ANSI 61







Installation Dimensions

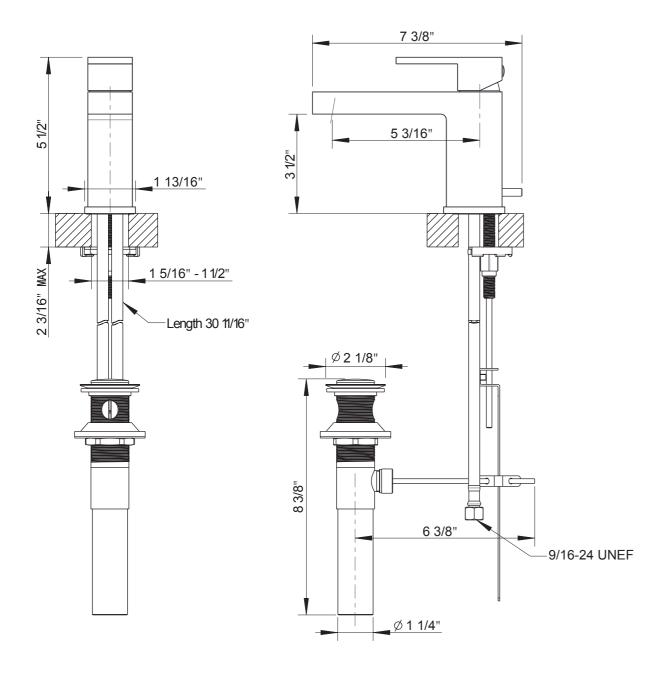

Installation Instructions

RIFT Collection Single Handle Lavatory Faucet












For easy installation of your faucet you will need:


- To read all the installation completely before beginning.
- To read all warnings, care, and maintenance information.

15122868-B 4 15122868-B




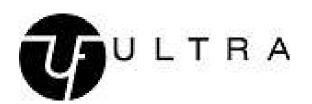


Installation Instructions

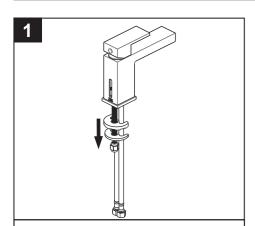


Remove mounting nut and both C shape washers from the shank of the faucet.

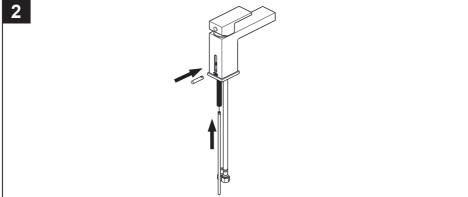


Insert lift rod through the shank from the bottom. Then connect lift rod with the lift rod knob. Ensure knob is screwed tight.

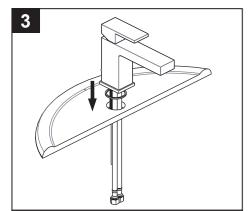


Seat seal into under side of faucet base. Feed faucet supplies, mounting stud and lift rod through the mounting hole of lavatory or mounting surface.

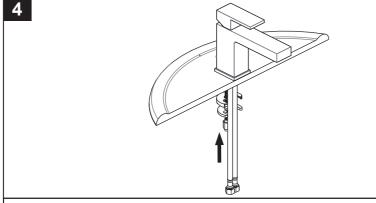


From below, push gasket and retaining washer onto mounting stud. Secure faucet with mounting nut, pulling faucet to front of sink so supplies rests against mounting hole. Before final tightening make sure collar on mounting nut is seated into retaining washer. Adjust faucet so that it is centered. Tighten mounting nut to complete faucet mounting.

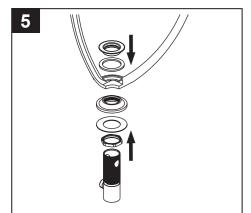

Drop flange into lavatory drain. From below assemble rubber gasket, metal washer and lock nut. Do not tighten.

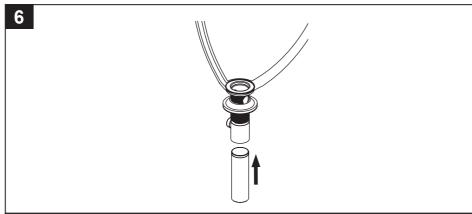


Place seal with small end facing up into tailpiece and tighten against drain body. Pivot rod opening in tailpiece should face the rear of the lavatory. Tighten lock nut with channel locks. Do not over tighten.

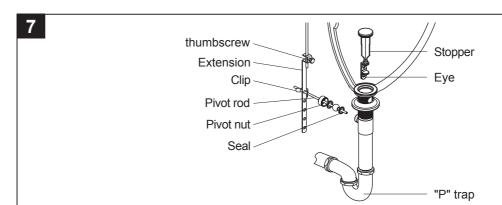

Assemble pivot rod, pivot nut, clip and seal as shown. Hand tighten pivot nut. Drop stopper into drain. (For vandal proof drain rotate stopper so pivot rod goes through eye of stopper. Make connection to "P" trap.)

Remove one end of clip from pivot rod by squeezing ends together while sliding.

Insert pivot rod into second or third hole in extension and reassemble clip. (Extension may need to be bent). Adjust stopper height by repositioning extension and tightening thumbscrew.

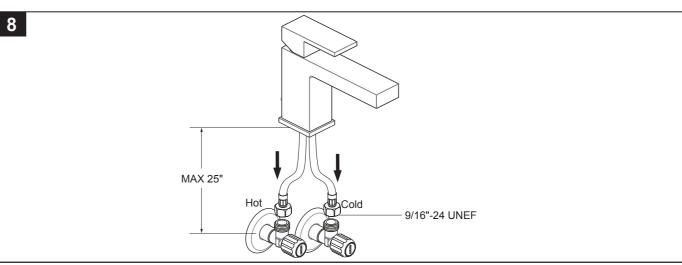


Connect flexible supplies directly to wall supplies. Connection on fitting supplies are 9/16"-24 UNEF compression. Connect left supply to hot (Marked with a red band) and right supply to cold wall supply.

Faucet supplies are 25" long from faucet base.

Note: If additional supply length is required, installer must purchase additional parts separately.

Important: If supply hoses are to long, loop as illustrated to avoid kinking.

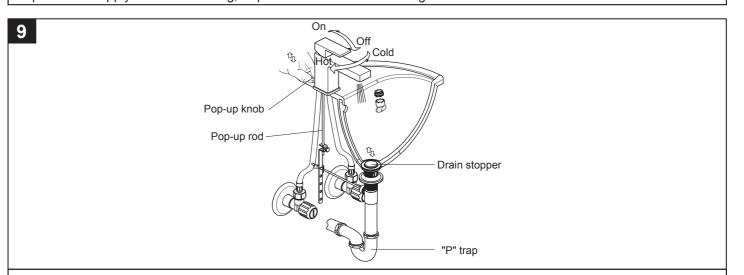

With handle in Off position, turn on water supplies and check all connections for leaks.

Remove aerator.

Operate handle to flush water lines thoroughly.

Replace aerator.

Check drain connections

Operate pop-up knob and fill lavatory with water. Check that drain stopper makes a good seal and retains water in sink. If drain stopper does not seal properly, adjust pop-up rod.

Release pop-up knob down and check all drain connections and "P" trap for leaks. Tighten if necessary.

15122868-B 2 3 15122868-B